

# BRUNO

# Offset Space-Saver™



**Bruno**<sup>R<sup>3</sup></sup>  
Equipped

**EXCLUSIVE R<sup>3</sup> Lift Belt**  
is now 50% Stronger —  
an Industry First!  
Patent Pending

**Model**  
**ASL-350**  
Patent Pending

Only  
**BRUNO**  
tests lift designs  
to  
three times  
rated-weight  
capacity!

- ◆ Bruno's Offset Space-Saver™ Model ASL-350 Vehicle Lift gives you the flexibility to load a partially-assembled scooter into the trunk of today's smaller cars or those cars with 'sloped-in' trunk designs. This Lift features an offset outer arm allowing you to more easily position your scooter inside narrow trunk openings.
- ◆ The Offset Space-Saver™ is ideal for vehicles with trunks that previously were considered too small for lift installations. Now you don't have to go without the benefit of a lift any longer and there's no need to consider the costly purchase of a different type of car.
- ◆ The Offset Space-Saver™ is designed with a low-profile outer arm to make storing your scooter even easier. All controls are located conveniently on top of the lift arm. Just press a button and the Offset Space-Saver™ eliminates the struggle of raising and lowering your scooter.
- ◆ The Offset Spacer-Saver™ can be stored anywhere, in the trunk or inside the vehicle. It disassembles quickly and easily, requiring only three steps. When an additional tower base assembly is ordered, it can even be used in more than one vehicle. The Offset Space-Saver™ raises and stores many types of three-wheel or four-wheel scooters weighing up to 200 lb/90 kg.

## OPTIONAL BRUNO POW'RPAC



- ◆ Easy to use!
- ◆ Convenient!
- ◆ Works in most minivans, SUVs, station wagons & sedans!

Pow'rPac easily installs in your vehicle — just plug into the vehicle's power outlet!

The complete, independent power supply for your automotive lift!

- ◆ **EXCLUSIVE!** Bruno's R<sup>3</sup> Lift Belt is now 50% stronger! Count on Bruno's R<sup>3</sup> Lift Belt for ease of use, longer life and safer operation — **another Industry First!**
- ◆ Expert installation and complete after-sale service is provided by Bruno's worldwide network of dealers.
- ◆ Only Bruno has over 20 different interior/exterior scooter, wheelchair and powerchair lifts for nearly any sedan, minivan, sport utility vehicle (SUV), full-size van, pickup truck and crossover vehicles.
- ◆ All Bruno Lifts are eligible for reimbursement under the terms of Mobility Programs offered by GM, Honda, Hyundai, Saturn, Chrysler, Ford, Toyota, Lexus, Volvo and Volkswagen.

  
for your independence

# Using the *Bruno Offset Space-Saver™* is easy!



Bruno's Offset Space-Saver™ unique design allows you to manually swing and position your scooter inside a narrow trunk opening.



Once inside the trunk opening, simply push the **DOWN** button and lower the scooter to the trunk floor. Disconnect the docking device and raise the lift strap.




To disassemble, simply remove the low-profile outer arm, placing it in the trunk or inside the car.



Then, remove the horizontal pivot tube and store it with the low-profile outer arm.



Finally, place the vertical offset post with the other lift components.

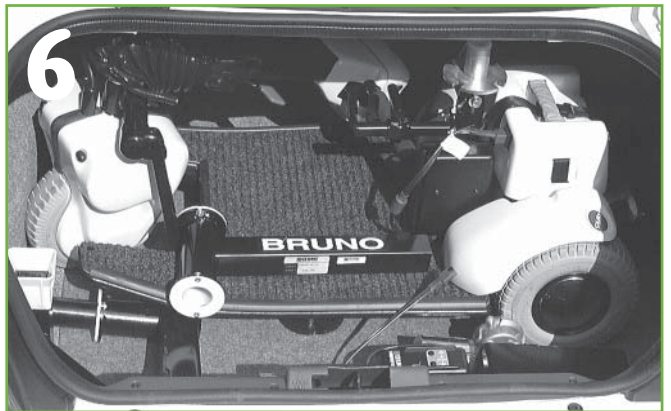

The scooter and Offset Space-Saver™ are now securely stored. Close the trunk and you're ready to go!

**Represented By:**

 **BRUNO™**  
for your independence

Bruno Independent Living Aids, Inc., 1780 Executive Drive,  
P.O. Box 84, Oconomowoc, WI 53066

1-800-882-8183 ♦ FAX: 1-262-953-5501  
[www.bruno.com](http://www.bruno.com)